

CIRCUIT SIZE						
	90120-0121	90120-9121	90120-0761	90120-9761	90120-0921	90120-9921
	-0122	▲ -9122	-0762	▲ -9762		▲ -9922
	-0123	-9123	-0763	-9763		-9923
	-0124	-9124	-0764	-9764		-9924
	-0125	-9125	-0765	-9765		-9925
	-0126	-9126	-0766	-9766		-9926
	-0127	-9127	-0767	-9767		-9927
	-0128	-9128	-0768	-9768		-9928
	-0129	-9129	-0769	-9769		-9929
	-0130	-9130	-0770	-9770		-9930
	-0131	-9131	-0771	-9771		-9931
	-0132	-9132	-0772	-9772		-9932
	-0133	-9133	-0773	-9773		-9933
	-0134	-9134	-0774	-9774		-9934
	-0135	-9135	-077	-9775		-9935
	-0136	-9136		-9776		-9936
	-0137	-9137		-9777		-9937
	-0138	-9138		-9778		-9938
	-0139	-9139		-9779		-9939
	-0140	-9140		-9780		-9940
	-0141	-9141		-9781		-9941
	-0142	-9142		-9782		-9942
	-0143	-9143		-9783		-9943
	-0144	-9144		-9784		-9944
	-0145	-9145		-9785		-9945
	-0146	-9146		-9786		-9946
	-0147	-9147		-9787		-9947
	-0148	-9148		-9788		-9948
	-0149	-9149		-9789		-9949
	-0150	-9150		-9790		-9950
	-0151	-9151		-9791		-9951
	-0152	-9152		-9792		-9952
	-0153	-9153		-9793		-9953
	-0154	-9154		-9794		-9954
	-0155	-9155		-9795		-9955
	-0156	-9156		-9796		-9956
	-0157	-9157		-9797		-9957
	-0158	-9158		-9798		-9958
	-0159	▼ -9159		▼ -9799		▼ -9959
	90120-0160	90120-9160	90120	90120-9800	90120	90120-9960

I  
±  
±  
(6.75)  
.266

I  
±  
±  
(2.90)  
.114

T-  
- \ -TI - - \I-TI - -  
- T - - -

123456789101112131415161718192021222324252627282930313233343536373839404142434445464748495051525354555657585960

PART NO'S ADDED

▼ 0  
0

SEE CHART