

INSTRUCTION LEAFLET

Dear Customer.

Congratulations on making the decision to buy the Energizer Hi Energy Battery Charger for Nickel Metal Hydride AA, AAA, C, D and 9V size rechargeable batteries. Please note that this charger must not be used for Nickel Cadmium, Alkaline, Carbon zinc, Lithium, or any kind of battery other than Nickel Metal Hydride.

SPECIAL FEATURES

Especially designed for Nickel Metal Hydride rechargeable batteries for the following sizes

HR6,AA 2 to 4 pieces at a time HR6,AAA 2 to 4 pieces at a time HR14,C 2 to 4 pieces at a time HR20,D 2 to 4 pieces at a time HR22,9V 1 to 2 pieces at a time

- 2. Safety cover to protect batteries while charging.
- LED indicators showing charging status.
- 4. Automatic charging current control for different size batteries, the charger will switch-off after 5 hours for each battery type and transfer to trickle charge except 9V/HR22 batteries which are charged continuously at a safe rate.
- 5. Reverse polarity safety protections.

OPERATING INSTRUCTIONS

- 1. Open the safety cover, place Nickel Metal Hydride batteries in the battery charger respecting the polarity.
- Plug the charger to a correct household electric outlet.
- For AA, AAA, C and D size batteries the LED will light up in green showing the trickle charge been activated.

Push the red button to activate the fast charge and the LED will light up in red.

Close the safety cover.

After charging, the red light will turn off indicating the trickle charge is on. The charged batteries are ready for use.

- When 9V batteries are placed, the 9V charging channel LED will then glow in GREEN indicating the 9V batteries are charging.
- After use, disconnect the plug from the outlet and remove the batteries.

CHARGING TIMES

Size	Charging Current	Nickel-Metal Hydride			Trickle Charge
ΑÃ	280mA	HR6	1200mAh	5 hours	25mA
AAA	140mA	HR03	550mAh	5 hours	10mA
С	450mA	HR14	2200mAh	5 hours	60mA
D	450mA	HR20	2200mAh	5 hours	60mA
9V-	15mA	HR22	150mAh	14 hours	15mA


Channel to channel loading ± 15%

IMPORTANT SAFETY INSTRUCTIONS

- Charge Nickel Metal Hydride rechargeable batteries only. Do not charge any other kind of battery not specified on the charger
- 2. For indoor use only. Do not expose this charger to water, rain, snow or excessive moisture.
- Never use an extension cord or any attachment not recommended by Energizer, otherwise this may result in a risk of fire, electric shock or injury to persons.
- Do not operate the charger if it has been subjected to shock or damage. Take it to a qualified serviceman for repair.
- 5. Do not disassemble the charger. Incorrect reassemble may result in a risk of electric shock or fire.
- 6. Unplug the charger from outlet before attempting any maintenance or cleaning. This may result on electric shock and turning off controls will not reduce this risk.

CAUTION

- 1. During charging, charger pack will feel warm.
- Never alter plug provided. If the plug does not fit the outlet, install the proper outlet by a qualified electrician. Improper connection can result in a risk of an electric shock.
- 3. Never use as a power source for any electrical equipment.

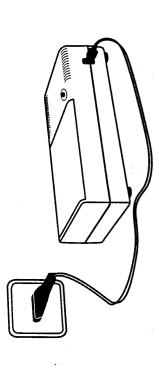

Energizer, ACCU
RECHARGEABLE
Hi Energy Charger
Nickel Metal Hydride