


MOULDED BLACK NATURAL RUBBER STANDARD SCREW BUFFERS

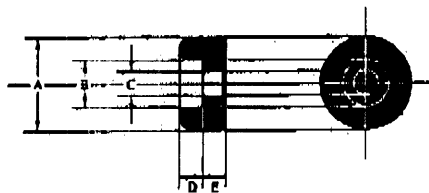

A = BASE DIAMETER
 B = COUNTERSINK DIAMETER
 C = HOLE DIAMETER
 D = COUNTERSINK DEPTH
 E = BASE DEPTH


MOULD	A	B	C	D	E
3101	1/2"	1/4"	1/8"	1/8"	1/8"



A = BASE DIAMETER
 B = TOP DIAMETER
 C = COUNTERSINK DIAMETER
 D = HOLE DIAMETER
 E = COUNTERSINK DEPTH
 F = BASE DEPTH

320237

MOULD	A	B	C	D	E	F
3084	5/8"	9/16"	1/4"	1/16"	3/16"	3/16"
3108	3/4"	5/8"	5/16"	5/32"	3/16"	1/8"
3106	7/8"	3/4"	5/16"	5/32"	1/8"	3/16"
3107	1"	7/8"	5/16"	5/32"	1/4"	1/8"

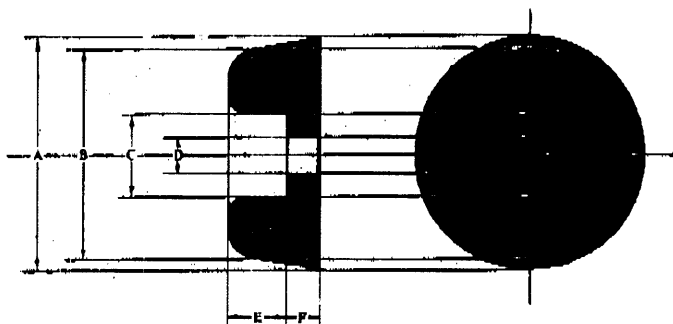

A = BASE DIAMETER
 B = TOP DIAMETER
 C = COUNTERSINK DIAMETER
 D = HOLE DIAMETER
 E = COUNTERSINK DEPTH
 F = HEAD DEPTH

MOULD	A	B	C	D	E	F
3098	1.1/4"	1.1/8"	7/16"	3/16"	5/16"	3/16"