



Capacitive Sensor Control IC Series





Capacitive Sensor Switch Control IC

BU21051FS

Description

BU21051FS are the capacitive sensor controller with 2ch respectively.

The IC has the port interface and easy to replace the point of switch to this controller.

Features

- 1) Port output interface
- 2) Few software control
- 3) 2ch GPIO outputs
- 4) 5V power supply voltage available
- 5) Integrated 10bit AD converter, clock and reset
- 6) Package SSOP-A16

Applications

It is possible to use it widely as a switch such as home electric appliance.

● Absolute Maximum Ratings (Ta=25°C)

	CVMDOL	RATII	UNIT		
PARAMETER	SYMBOL	MIN	MAX	ONT	
Applied velters	AVDD	-0.3	7.0	V	
Applied voltage	DVDD	-0.3	7.0		
lancit voltage	V_{AIN}	-0.3	AVDD + 0.3	V	
Input voltage	V_{DIN}	-0.3	DVDD + 0.3		
Storage temperature					
range	T_{stg}	-55	125	°C	
Power dissipation P_d		500	mW		

Ambient temperature reduces a permission loss by 5mW per case more than 25 degrees Celsius, 1 degree Celsius

Recommended Operating conditions

DADAMETED	OVANDOL	RATING				
PARAMETER	SYMBOL	MIN	TYP	MAX	UNIT	
Applied voltage	AVDD	4.5	5.0	5.5	V	
Applied voltage	DVDD	4.5	5.0	5.5	V	
Operating temperature		-40	25	85	ဇင	
range	T_{opr}	-40	23	03		

● Electrical characteristics(Especially, Topr=25°C and AVDD=DVDD=0 as long as it doesn't specify it.)

PARAMETER	SYMBOL	RATING				0 - 177			
		MIN	TYP	MAX	UNIT	Condition			
DC characteristics									
Input"H"voltage	V _{IHIO}	DVDD x 0.9	1	DVDD + 0.2	V				
Input"L"voltage	V _{ILIO}	GND - 0.2	1	DVDD x 0.1	V				
Output"H"voltage	V _{OL}	GND	1	DVDD x 0.2	V	I_{OH} = -2[mA]. Overshoot is excluded.			
Output"L"voltage	I _{IZ}	-1	ı	1	μA				
Input leakage current	loz	-1	1	1	μA				
Output leakage current	I _{ST}	-	-	2	μA	Shutdown (SDN="L")			
Standby current	I _{DD}	-	500	-	uA				


●A/D Converter

PARAMETER	0) (1 4 1 0 0 1	F	RATING)	LINUT	0 - 177
	SYMBOL	MIN	TYP	MAX	UNIT	Condition
Resolution		-	10	-	bit	
Analog Input voltage	V _{AIN}	GND	-	AVDD	V	
Change clock frequency	f _{adck}	0.2	-	1.0	MHz	
Change time	f_{tim}	-	13	-	µsec	$f_{\text{adck}} = 1[\text{MHz}]$
Zero scale voltage		-	-	GND + 0.07	V	
Full scale voltage		AVDD - 0.07	-	-	V	
Differential non line accurate	DNL	-	-	±3	LSB	
Integrate non line accurate	INL	-	-	±3	LSB	

●CR Oscillator characteristic

PARAMETER	SYMBOL	RATING			LINUT	O contract
		MIN	TYP	MAX	UNIT	Condition
Oscillation Frequency f _{cr}		0.9	1.6	2.5	MHz	

Block Diagram, Pin configuration

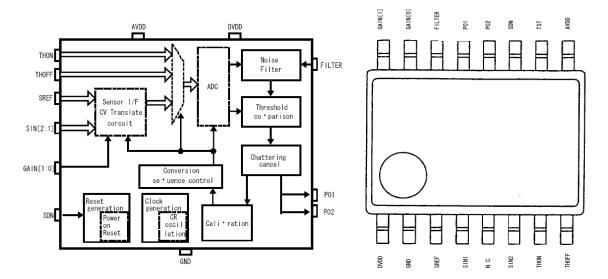

● Sensor I/F CV Conversion Circuit:

This part selects target sensor and converts its capacitance to a voltage signal. Specifically, alleight sensors are selected one-by-one and their capacity is compared to a common referencecapacity. Each difference value is converted to a certain voltage signal.

AD Conversion

The voltage signal derived from CV conversion is further converted to digital value by this block.

■Conversion Sequence Control

This block controls the process of CV conversion and generates timing of selecting target sensors.

●Noise Filter

The GND level difference between appliance and human body will cause noises to the CV conversion

Compare threshold

CV converted to sensor data On / Off compared with a threshold, the switch converts the signal.

Calibration

When the capacitance change do not exceed the threshold for a certain period, this blockstarts-up calibration process.

Reset Generation

This is internal reset circuit. Reset is initialized by external SDN signal.

Clock Generation


Clock from internal RC oscillation circuit is used as system clock.

●Pin Description

Pin No	Name	I/O	Function	Notes	Supply referen ce	Reset level ^{**1}	I/O Pad
1	DVDD	Power	Digital part Power supply	Digital part Power supply	-		
2	GND	Ground	Ground	-	-		
3	SREF	Aln	Standard capacitor input	-	AVDD	"Hi-Z"	3
4	SIN1	Aln	Sensor input1	-	AVDD	"Hi-Z"	3
5	N.C.	-	No connect	-	-	-	-
6	SIN2	Aln	Sensor input 2	-	AVDD	"Hi-Z"	3
7	THON	Aln	Sensor ON threshold voltage input	-	AVDD	"Hi-Z"	3
8	THOFF	Aln	Sensor OFF threshold voltage input	-	AVDD	"Hi-Z"	3
9	AVDD	Power	Analog part Power supply	-	-		
10	TST	In	Test input	Usually tide to "L"	DVDD	-	1
11	SDN	In	Shutdown input	"H" : state of operation "L" : halt condition	DVDD		1
12	PO2	Out	Switch output 2	Sensor pin2 On \rightarrow "L", Off \rightarrow "Hi-Z"	DVDD	"Hi-Z"	2
13	PO1	Out	Switch output 1	Sensor pin1 On \rightarrow "L", Off \rightarrow "Hi-Z"	DVDD	"Hi-Z"	2
14	FILTER	In	Filter selection	"H": Filter effect: strong "L": Filter effect: Weak	DVDD		1
15	GAIN[0]	In		GAIN[1:0] = 00 : Strong GAIN[1:0] = 01 :	DVDD		1
16	GAIN[1]		Gain level selection	GAIN[1:0] = 10 : Gain GAIN[1:0] = 11 : Week	DVDD		1

**1 Initial State ① When internal organs power-on reset is effective ② When SDN = "L"

●I/O Circuit

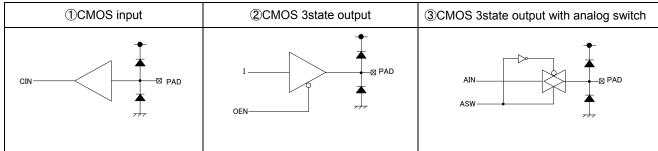

【THON: Button OFF→ON threshold value judge】 【THOFF: Button ON→OFF threshold value judge】

Setting the threshold value of electrostatic Sensor Switches. By applying voltages can be set. As an example, 1/2VDD applied to the entire range of the sensor output 1 / 2 to set the threshold value. In fact, the voltage setting resistance to the partial pressure is recommended to us.

[GAIN Selection]

Sensor gain can be set in 4 stages

GAIN[1:0] = 00 (x92)


GAIN[1:0] = 01 (x69)

GAIN[1:0] = 10 (x46)

GAIN[1:0] = 11 (x1)

[Filter selection]

The noise filter effect can be selected If "Strong" is selected, noise will get down, but the reaction time will be longer.

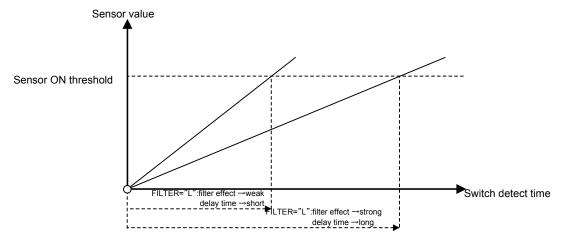

Setting method

1)Please for the first time in a minimum gain.

2)THOFF = 0V, and, THON 1/2VDD voltage as a guideline for whether or not to switch ON, and gain selection to please the rough.

Note: ON gain to a minimum, you gain more precision amended to increase the impact too, so please take note.

Operation Mode

This IC has several modes, called detection mode, calibration mode, and shut-down mode. Each mode is described as follow

[Detection Mode]

This is normal operation mode of this IC. In this mode, IC detects the sensor capacitance continually.

[Calibration Mode]

Under detection mode when no operation has been detected for sometime, Sensor offset calibration will be done. And the interval between each calibration is fixed


Detection mode and Calibration mode are switched automatically.

[Shutdown Mode]


When SDN pin is set to "L", IC will be shut-down and all internal circuits will stop working. IC will work again when SDN pin is set to "H".


● Power Supply ON Sequence

This IC has two power input pins AVDD and DVDD. Power ON sequence must be whether set DVDD first or set the two at one time. Since internal reset circuit is monitoring AVDD, wrong power ON sequence may cause initialization error.



SSOP-A16

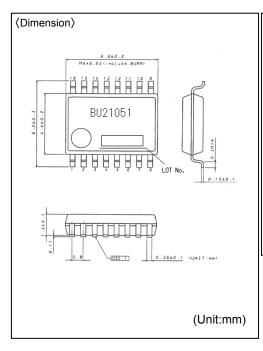

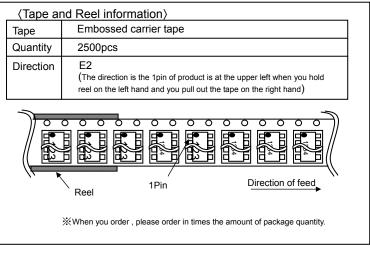

The content specified in this document is correct as of 1st , 2009, January

No copying or reproduction of this document, in part or in whole, is permitted without the consent of ROHM CO.,LTD.

The content specified herein is subject to change for improvement without notice.

The content specified herein is for the purpose of introducing ROHM's products (hereinafter "Products"). If you wish to use any such Product, please be sure to refer to the specifications, which can be obtained from ROHM upon request. Examples of application circuits, circuit constants and any other information contained herein illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.

Great care was taken in ensuring the accuracy of the information specified in this document. However, should you incur any damage arising from any inaccuracy or misprint of such information, ROHM shall bear no responsibility for such damage.

The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM and other parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the use of such technical information.

The Products specified in this document are intended to be used with general-use electronic equipment or devices (such as audio visual equipment, office-automation equipment, communication devices, electronic appliances and amusement devices).

The Products are not designed to be radiation tolerant.

ROHM Sales Offices

While ROHM always makes efforts to enhance the quality and reliability of its Products, a Product may fail or malfunction for a variety of reasons,

Contact us for further information about the products.

Please be sure to implement in your equipment using the Products safety measures to guard against the possibility of physical injury, fire or any other damage caused in the event of the failure of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHM shall bear no responsibility whatsoever for your use of any Product outside of the prescribed scope or not in accordance with the instruction manual.

The Products are not designed or manufactured to be used with any equipment, device or system which requires an extremely high level of reliability the failure or malfunction of which may result in a direct threat to human life

or create a risk of human injury (such as a medical instrument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel-controller or other safety device). ROHM shall bear no responsibility in any way for use of any of the Products for the above special purposes. If a Product is intended to be used for any such special purpose, please contact a ROHM sales representative before purchasing.

If you intend to export or ship overseas any Product or technology specified herein that may be controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to obtain a license or permit under the Law.

+44-1-908-272400 +86-22-23029181 +1-770-754-5972 +45-3694-4739 +86-21-6279-2727 Atlanta Denmark Shanghai Zhuhai Boston +1-978-371-0382 Espoo +358-9725-54491 Hangzhou +86-571-87658072

R0128A

+1-858-625-3630 +86-592-238-5705 +86-756-3232-480 Hong Kong +852-2-740-6262 Taipei +886-2-2500-6956 Chicago +1-847-368-1006 +358-2-7332234 +86-25-8689-0015 Nanjing Dallas +1-972-473-3748 Oulu +358-8-5372930 Ningbo +86-574-87654201 Kaohsiung +886-7-237-0881 Qingdao Suzhou Denver Detroit ±1=303=708=0908 Barcelona +34-9375-24320 ±86-532-8577-9312 ±65-6332-2322 +1-248-348-9920 +36-1-4719338 +86-512-6807-1300 +63-2-807-6872 Hungary Nashville +1-615-620-6700 Poland +48-22-5757213 Wuxi +86-510-82702693 Thailand +66-2-254-4890 Kuala Lumpur +7-495-739-41-74 +82-2-8182-700 Guangzhou Huizhou u +86-20-3878-8100 +86-752-205-1054 +60-3-7958-8355 +60-4-2286453 Mexico +52-33-3123-2001 Russia +49-2154-9210 Düsseldorf Seoul Penang Munich +49-8999-216168 Masan +82-55-240-6234 Fuzhou +86-591-8801-8698 Kvoto +81-75-365-1218 +49-711-7272-370 +33-1-5697-3060 Dalian +86-411-8230-8549 +86-10-8525-2483 Dongguan +86-769-8393-3320 +81-45-476-2290 nzhen +86-755-8307-3008 Beijing

ROHM Co., Ltd. 21 Saiin Mizosaki-cho, Ukyo-ku,

Kyoto 615-8585 Japan TEL:+81-75-311-2121 FAX:+81-75-315-0172





Notes

No copying or reproduction of this document, in part or in whole, is permitted without the consent of ROHM CO.,LTD.

The content specified herein is subject to change for improvement without notice.

The content specified herein is for the purpose of introducing ROHM's products (hereinafter "Products"). If you wish to use any such Product, please be sure to refer to the specifications, which can be obtained from ROHM upon request.

Examples of application circuits, circuit constants and any other information contained herein illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.

Great care was taken in ensuring the accuracy of the information specified in this document. However, should you incur any damage arising from any inaccuracy or misprint of such information, ROHM shall bear no responsibility for such damage.

The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM and other parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the use of such technical information.

The Products specified in this document are intended to be used with general-use electronic equipment or devices (such as audio visual equipment, office-automation equipment, communication devices, electronic appliances and amusement devices).

The Products are not designed to be radiation tolerant.

While ROHM always makes efforts to enhance the quality and reliability of its Products, a Product may fail or malfunction for a variety of reasons.

Please be sure to implement in your equipment using the Products safety measures to guard against the possibility of physical injury, fire or any other damage caused in the event of the failure of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHM shall bear no responsibility whatsoever for your use of any Product outside of the prescribed scope or not in accordance with the instruction manual.

The Products are not designed or manufactured to be used with any equipment, device or system which requires an extremely high level of reliability the failure or malfunction of which may result in a direct threat to human life or create a risk of human injury (such as a medical instrument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel-controller or other safety device). ROHM shall bear no responsibility in any way for use of any of the Products for the above special purposes. If a Product is intended to be used for any such special purpose, please contact a ROHM sales representative before purchasing.

If you intend to export or ship overseas any Product or technology specified herein that may be controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to obtain a license or permit under the Law.

Thank you for your accessing to ROHM product informations.

More detail product informations and catalogs are available, please contact your nearest sales office.

ROHM Customer Support System

THE AMERICAS / EUROPE / ASIA / JAPAN

www.rohm.com

Contact us : webmaster@rohm.co.jp

Copyright © 2009 ROHM CO.,LTD.

ROHM Co., Ltd. 21 Saiin Mizosaki-cho, Ukyo-ku, Kyoto 615-8585, Japan

TEL:+81-75-311-2121 FAX:+81-75-315-0172

